

SENSOR INSTALLATION

⚠ WARNING

A non-contact sensor (photoelectric sensor or equivalent) and a contact sensor (edge device or equivalent) is required on each individual installation to comply with UL325.

Reversing Sensors on the ground floor prevent gate from closing when vehicle is in loop area.
Exit Loops on the ground floor opens gate when vehicle crosses loop area.

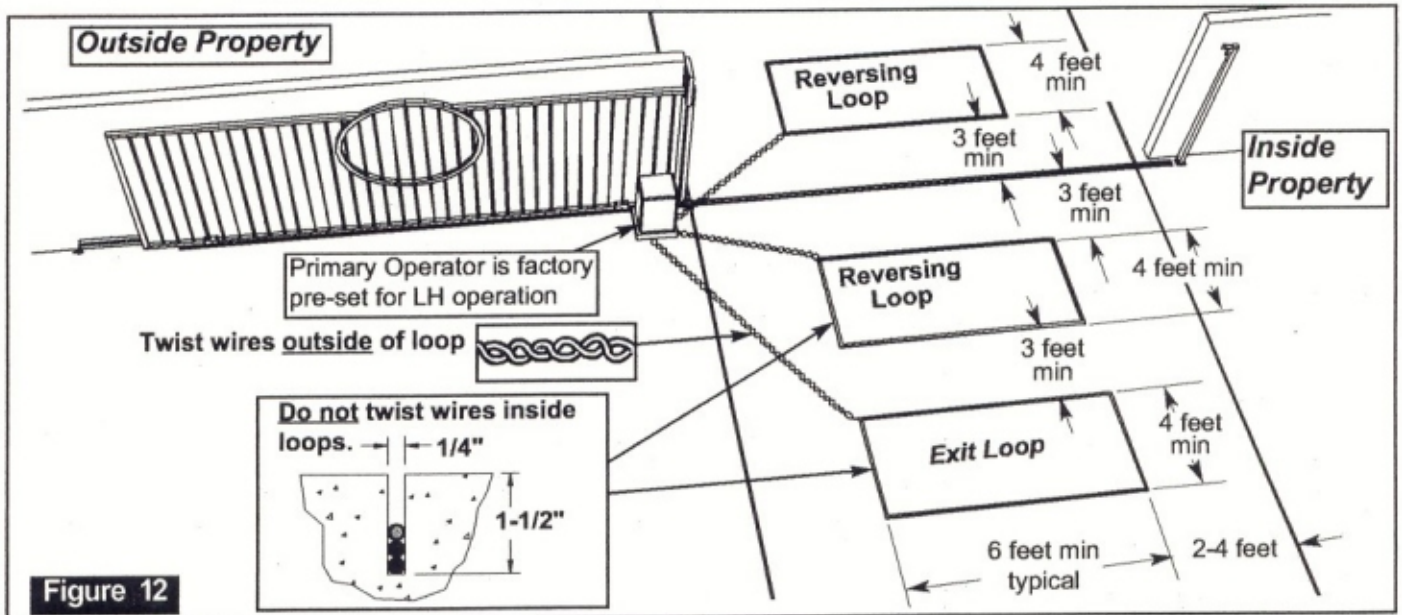


Figure 12

Figure 13 Master - Slave Installation

Set Dip Switch "Slave Mode" to ON for Slave Operator. RH operation requires Dip Switch "Reverse" to be ON.

